

PERFORATED TRIM MASKING TAPE

Protects rubber trims and bodyside mouldings during spraying. Perforated for easy tear off and flexible to follow contours and tight curves.

PART NO:	SIZE:	UNITS:
1055.5010	50mm x 10m	10

Perforated Trim Masking Tape



FEATURES

Protects rubber trims and bodyside mouldings during spraying. Perforated for easy tear off and flexible to follow contours and tight curves.

BENEFITS

- Pre-perforated for easy tear
- Linerless
- Easy lifting tab
- One size fits all



HOW TO USE THIS PRODUCT:



1. Choose area to be masked



2. Tear off a small section to mask a tight corner and tear the tape down to the plastic section. Then slide in between the rubber trim and bodywork.




3. To mask along a straight section, tear off a section no longer than 20cm, slide in and leave back the trim ensuring it overlaps the last piece.



4. Mask as normal and paint.



5. Allow paint to dry and remove all the masking materials.

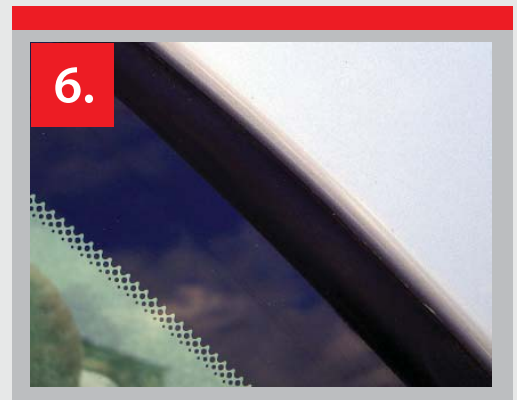

6. Check edges and polish if necessary.